

# HOOKING UP DISC HEADER MF WR9980

1. Make sure pins are in upper holes to push arms down.

See example.



2. Drive straight towards the header...

**NOTE:** Use the finger tip buttons to slow machine as low as possible for more control

Make sure arms go into receivers on both sides.

3. Drive until there is pressure on the arms go under tractor chain the forming shield up and then try to put pins in.

If pins don't go in, it could be that the header has to move over a bit. This can be done by hooking up centre link and try to lift them lower the header then retry the pins.

4. Then shut machine off and hook up hydraulics and electrical.

Now when the machine is started, it should show the disc header on the bottom of the screen as seen below:



5. Press the tractor with a wrench shown below:



6. Then press the header with the down arrow and float symbol shown below:



7. Then press the =O to remove the check mark as shown below:



8. If both top boxes have check marks in them, press the button on the joystick to drop the header down.

You will hear the floatation start to build to the preset pressure.

9. Lift header up then go move the pins to lower holes or you won't have flotation.



Your header should now lift and be ready to run.