

HOOKING UP DRAPER HEADER MF WR9980

1. Make sure pins are in upper holes to push arms down.

See example.



2. Drive straight towards the header...

NOTE: Use the finger tip buttons to slow machine as low as possible for more control

Make sure arms go into receivers on both sides.

It is easier to have the long adapter arms on the tractor first- that way it is easier to see the end of the arms and receiver on the header. Make sure the arms go into the receivers on both sides.

3. Drive until there is pressure on the arms (lift slightly while driving in), go under tractor and put pins in.

For the draper headers, it is best to get the pins in the arms before hooking up the centre link. Once the pins are in, hook up the centre link.

NOTE: There are buttons beside the hyd coupler to run the cylinder in and out.

4. Then shut machine off and hook up hydraulics and electrical.

Now when the machine is started, it should show the draper header on the bottom of the screen.

5. Press the tractor with a wrench shown below:



6. Then press the header with the down arrow and float symbol shown below:



7. Then press the =O to remove the check mark shown below:



8. If both top boxes have check marks in them, press the button on the joystick to drop the header down.

You will hear the floatation start to build to the preset pressure.

9. Lift header up then go move the pins to lower holes or you won't have floatation.



Your header should now lift. If there is no transport kit, you can fold it into field mode.