

TO UNHOOK DISC HEADER ON MF WR9980

1. First move the pins at the top of floatation arms from the lower hole to the top hole.

See example. 

This helps to push the lift arms all the way down.



2. Then lower the header onto the ground.


3. Press the tractor with a wrench shown below:



4. Then press the header with the down arrow and float symbol shown below:




5. Then press the header with the =O and the float symbol shown below:

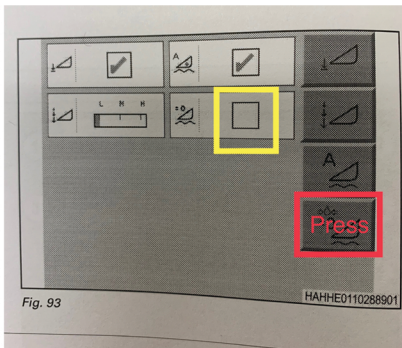


NOTE: Header must be on the ground because when floatation is dropped the lift system can't hold the header so it will drop.

6. Then press the =O with the header and the float symbol shown below:

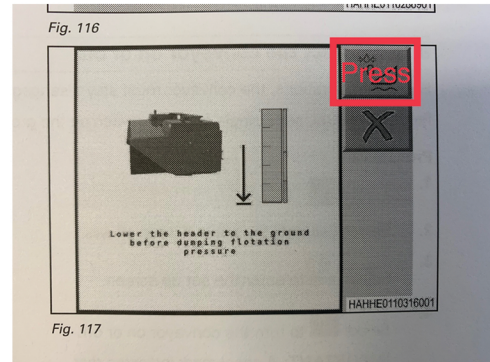

7. You can hear the floatation dropping off, when it's done dropping, press button on the joystick to lower header.

8. Now the pins that hold the header on can be removed.

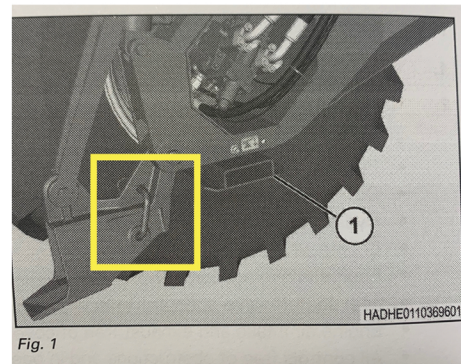

If pins don't come out try to drive forward to take pressure off.

9. Then shut machine off to unhook hydraulics and wiring. (Engine has to be off to hook and unhook hyd and electrical)

10. Then unhook centre link. There are buttons beside hyd coupler to run centre link in and out, but engine needs to be running.

The tractor can be backed away from header.