

TO UNHOOK DRAPER HEAD ON MF WR9980

1. First move the pins at the top of floatation arms from the lower hole to the top hole.

See example.



2. Then lower the header onto the ground or onto the transport if equipped. Also lower reel.

NOTE: Now is a good time to check that the gauge wheels are going to touch down and hold the back of the header when it is disconnected. Now drop the floatation pressure:


3. Press the tractor with a wrench shown below:



4. Then press the header with the down arrow and float symbol shown below:




5. Then press the header with the =O shown below:

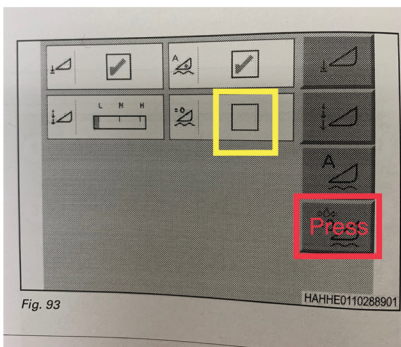


NOTE: Header must be on the ground because when floatation is dropped the lift system can't hold the header so it will drop.

6. Now press =O

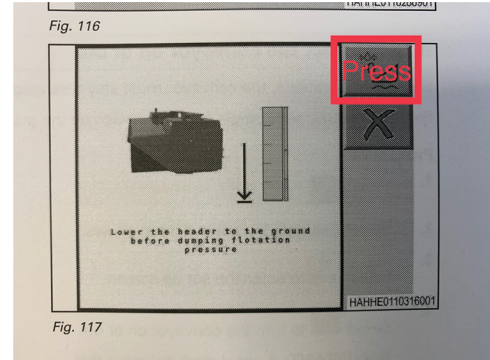

7. You can hear the floatation dropping off, when it's done dropping, press button on the joystick to lower header.

8. Now the pins that hold the header on can be removed.

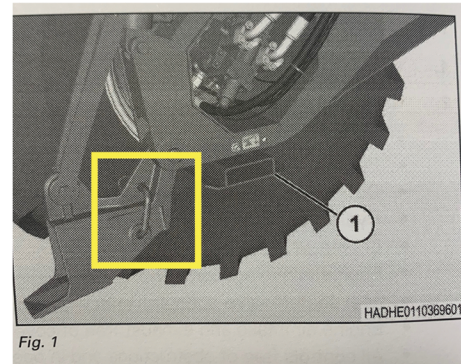

If pins don't come out try to drive forward to take pressure off.

9. Then shut machine off to unhook hydraulics and wiring. (Engine has to be off to hook and unhook hyd and electrical)

10. Then unhook centre link. There are buttons beside hyd coupler to run centre link in and out, but engine needs to be running.

The tractor can be backed away from header.